


FTR IW PLATES SHALL BE FASTENED INTO PURLINS AT:

CORNER ZONE	6" O.C.
PERIMETER ZONE	8" O.C.
FIELD ZONE	12" O.C.

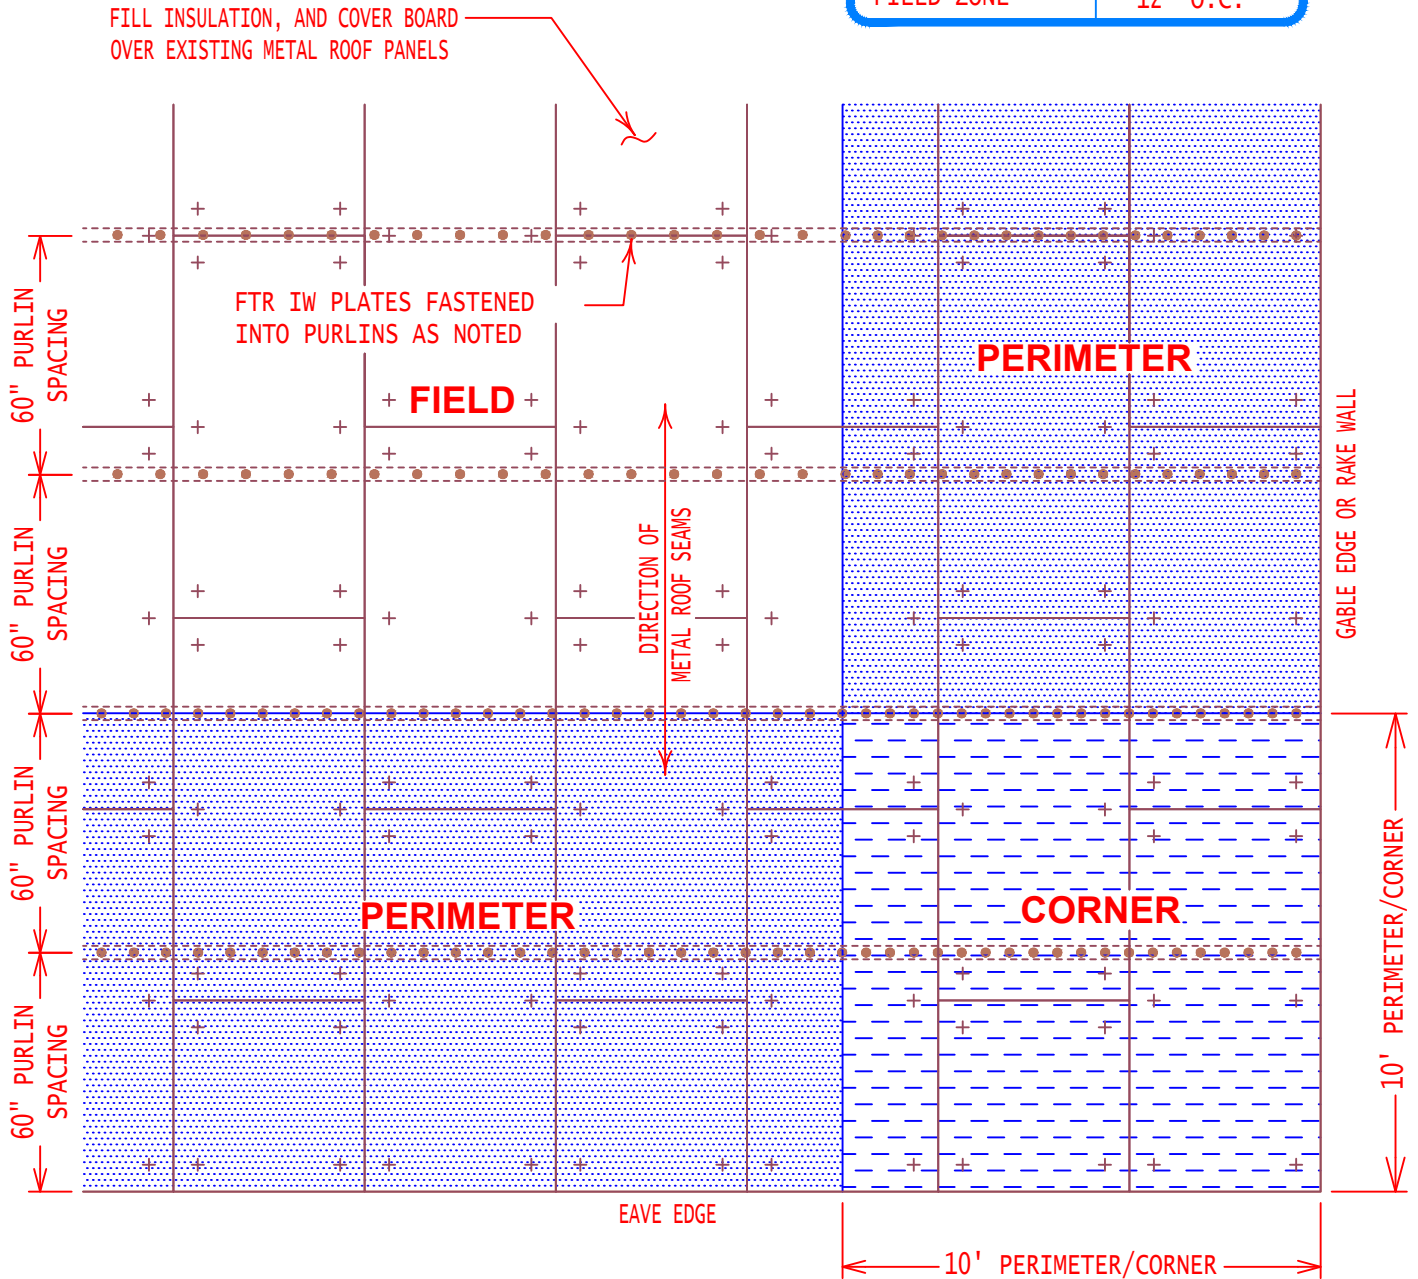

NOTE:
REFER TO DETAILS FTR-IWMR1 & FTR-MR2 FOR INSULATION LAYOUT AND ATTACHMENT OVER EXISTING METAL ROOF PANELS.



GENERAL REFERENCE:
"FTR GS 01/21"

APPLICABLE SYSTEMS:
"FTR IW 01/21"

INDUCTION WELD (IW) PLATE ATTACHMENT
LAYOUT ON METAL RETROFIT

REVISES DETAIL

ALL PREVIOUS

ISSUE DATE

07-17-15

DRAWING NUMBER

FTR-IWMR3